CURLI

WaveCurler 5-i-1

WaveCurler 5-i-1

Norsk bruksanvisning

Viktige sikkerhetsinstruksjoner

Når du bruker elektriske apparater, spesielt i nærheten av barn, må grunnleggende sikkerhetsforanstaltninger alltid følges, inkludert følgende:

- Les alle instruksjoner før bruk.
- Hold elektriske produkter unna vann.
- Som med alle elektriske produkter forblir enkelte deler strømførende selv når bryteren er av, så lenge apparatet er koblet til en strømkilde. Dette medfører risiko for elektrisk støt.
- Koble alltid fra strømmen etter bruk. Ikke bruk apparatet i nærheten av væsker.
- Ikke oppbevar eller plasser produktet slik at det kan falle i eller trekkes ned i vann (f.eks. nær en vask eller et badekar).
- Ikke plasser eller senk produktet i vann eller andre væsker.
- Dersom apparatet faller i vann, koble det umiddelbart fra strømmen. Ikke forsøk å hente det opp mens det er tilkoblet strøm.

Hvordan bytte mellom de ulike rørene

1. Fjerning

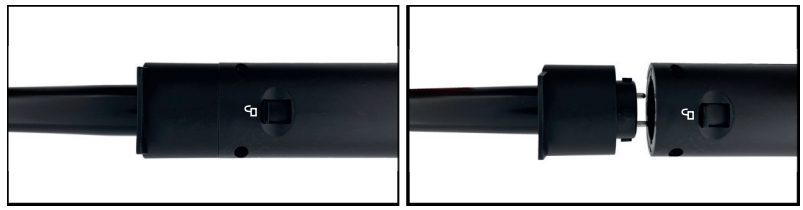

Vent til apparatet ikke lenger er varmt, trykk ned de to knappene foran på håndtaket, og trekk deretter ut.

2. Installasjon

Vent til apparatet ikke lenger er varmt. Sørg for at begge sider er jevne, som vist i bilde 1. Hold i håndtaket og skyv det rett inn, som vist i bilde 2. Det vil låse seg på plass, som vist i bilde 3.

Advarsel

For å redusere risikoen for brannskader, elektrisk støt, brann eller skade på andre:

- Apparatet skal aldri etterlates uten tilsyn når det er koblet til strøm.
- Nøye oppsyn er nødvendig når apparatet brukes av, på eller i nærheten av barn eller personer med visse funksjonsnedsettelser.
- Bruk kun apparatet til det tiltenkte formålet, som beskrevet i denne bruksanvisningen.
- IKKE bruk tilbehør som ikke er anbefalt av produsenten.
  Bruk aldri apparatet dersom ledningen eller støpselet er skadet, hvis det ikke fungerer som det skal, eller hvis det har blitt mistet i bakken, skadet eller senket i vann. Returner apparatet til et servicesenter for inspeksjon og reparasjon.
- Hold ledningen unna oppvarmede overflater. IKKE vikle ledningen rundt apparatet.
- Bruk aldri apparatet mens du sover.
  Ikke mist eller før inn gjenstander i noen åpninger eller slanger.
- IKKE bruk apparatet utendørs eller i nærheten av aerosol (spray) produkter eller der oksygen administreres.
- Krølltangen blir svært varm under bruk.
- IKKE la øyne eller bar hud komme i kontakt med oppvarmede overflater. Bruk alltid håndtaket.
- IKKE bruk en skjøteledning med dette apparatet.
- IKKE plasser det varme apparatet direkte på noen overflate mens det er varmt eller tilkoblet strøm.

Bruksanvisning for krølltangen

- Trinn 1: Velg en liten, jevn hårseksjon for krølling. (Merk: For helhetlige krøller, del håret inn i seksjoner på forhånd og start krøllingen fra nakken og opp mot pannen.)
- Trinn 2: Hold krølltangen med håndtaket nær hodebunnen og tuppen pekende nedover.
- Trinn 3: Vikle håret rundt krølltangen fra bunnen til tuppen i en nedadgående retning, og bruk en varmebeskyttende hanske for å unngå brannskader.
- Trinn 4: Hold håret rundt tangen i 2 til 5 sekunder.
- Trinn 5: Uten å trekke krølltangen nedover, slipp håret fra tuppen slik at det glir ut naturlig.
- Trinn 6: Skyv krølltangen forsiktig ut av håret. IKKE dra den nedover, da dette kan føre til floker.
- Det anbefales at håret ikke er dekket med for mye stylingprodukter før krølling, da dette kan tynge det ned eller forårsake skade (f.eks. for mye gelé, mousse osv.).
- Ta vare på disse instruksjonene for fremtidig referanse.

Vedlikeholdsinstruksjoner

Ditt apparat krever minimalt vedlikehold og trenger ikke smøring. Hold de oppvarmede overflatene rene og fri for støv, smuss og hårspray. Hvis rengjøring er nødvendig, koble apparatet fra strømkilden og la det avkjøles. Tørk av utsiden med en fuktig klut. Hvis ledningen blir vridd, rett den ut før bruk.

Advarsel

Hvis det oppstår en feil, IKKE forsøk å reparere den selv. Dette apparatet inneholder ingen deler som kan repareres av brukeren.

Oppbevaring

Når apparatet ikke er i bruk, trekk ut støpselet. La det avkjøles helt før det oppbevares på et trygt og tørt sted, utilgjengelig for barn. Vikle aldri ledningen rundt apparatet, da dette kan føre til tidlig slitasje og skader. Håndter ledningen forsiktig for å forlenge levetiden, og unngå rykk, skarpe bøyinger, vridning eller belastning, spesielt ved støpseltilkoblingene.

Bruksanvisning

Dette apparatet har en polarisert plugg (én stift er bredere enn den andre) som en sikkerhetsfunksjon. Hvis støpselet ikke passer i stikkontakten, snu det og prøv igjen. Hvis det fortsatt ikke passer, kontakt en kvalifisert elektriker. IKKE forsøk å deaktivere eller omgå denne sikkerhetsfunksjonen.

Stylingtips for din krølltang

- Håret bør være rent og helt tørt før bruk av krølltangen.
- Hvis krølltangen har et spesialdesignet non-stick-belegg, kan du bruke gelé, hårspray eller mousse uten at håret fester seg til tangen – men unngå overdreven bruk.
- Selv om tangen har en rask oppvarmingsfunksjon, la den varme seg opp i et par minutter for optimal styling.
- For tykkere og grovere hår, bruk mindre seksjoner for bedre resultater.

Spesifikasjoner

Sertifiseringer: CE, RoHS
Modell: WaveCurler 5-i-1
Importør: Aldrimett AS
Spenning, frekvens og effekt (EU): 110-240V, 50-60Hz, 45-100W

Made in China

© 2025 CURLI. Designet av CURLI i Oslo.

WaveCurler 5-i-1

English user manual

Important Safety Instructions

When using electrical appliances, especially in the presence of children, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Keep electrical products away from water.
- As with all electrical products, parts remain electrically live even when the switch is off, as long as they are connected to a power source. This poses a risk of electric shock.
- Always unplug after use. Do not use near liquids.
- Do not store or place the product where it could fall into or be pulled into water (e.g., near a sink or bathtub).
- Do not place or submerge the product in water or any other liquid.
- If the appliance falls into water, unplug it immediately. Do not reach into the water.

How to change the different tubes

1. Removal

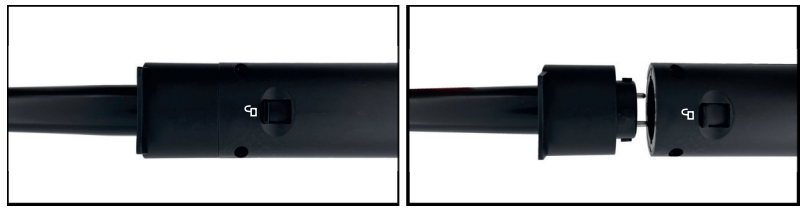

Wait until it is no longer hot, press down the two buttons at the front of the handle, and then pull out.

2. Installation

Wait until it is no longer hot. Ensure both sides are level, as shown in Picture 1. Hold the handle and push it in directly, as shown in Picture 2. It will lock into place, as shown in Picture 3.

Warning

To reduce the risk of burns, electrocution, fire, or injury to others:

- The appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended purpose, as described in this manual. DO NOT use attachments that are not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or submerged in water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces. DO NOT wrap the cord around the appliance.
- Never use while sleeping.
  Never drop or insert any object into any opening or hose.
- DO NOT use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- This curling iron is hot when in use.
- DO NOT let eyes or bare skin come into contact with heated surfaces. Always use the handle.
- DO NOT use an extension cord with this appliance.
- DO NOT place the heated appliance directly on any surface while it is hot or plugged in.

Curling Iron Instructions

- Step 1: Select a small, even strand of hair to curl. (Note: For full-head curls, section your hair beforehand and start curling from the neckline up to the forehead.)
- Step 2: Hold the curling iron with the handle near your scalp and the tip facing downward.
- Step 3: Wrap the hair around the curling iron from the base to the tip in a downward direction, using a heat-protective glove to prevent burns.
- Step 4: Hold the hair around the curler for 2 to 5 seconds.
- Step 5: Without pulling the curling iron downward, release the hair from the tip, allowing it to slide out naturally.
- Step 6: Slide the curling iron out of the hair carefully. DO NOT PULL IT DOWN, AS THIS MAY CAUSE TANGLES.
- It is preferable that the hair is not coated with excessive styling products before curling, as these can weigh it down or cause damage (e.g., too much gel, mousse, etc.).
- Save these instructions for future reference.

Maintenance Instructions

Your appliance requires minimal maintenance and does not need lubrication. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning is necessary, disconnect the appliance from the power source and allow it to cool. Wipe the exterior with a damp cloth. If the cord becomes twisted, untwist it before use.

Warning

If any malfunction occurs, DO NOT attempt to repair it yourself. This appliance contains no user-serviceable parts.

Storage

When not in use, unplug the appliance. Allow it to cool completely before storing it in a safe, dry location, out of reach of children. Never wrap the cord around the appliance, as this may cause premature wear and breakage. Handle the cord carefully to extend its lifespan, avoiding jerking, sharp bending, twisting, or straining, especially at the plug connections.

Operating Instructions

This appliance has a polarized plug (one blade is wider than the other) as a safety feature. If the plug does not fit into the outlet, reverse the plug and try again. If it still does not fit, contact a qualified electrician. DO NOT attempt to disable or bypass this safety feature.

Styling Tips for Your Curling Iron

- Hair should be clean and completely dry before using any styling iron.
- If your styling iron has a specially designed non-stick coating, you can use gel, hair spray, or mousse without worrying about hair sticking to the iron; just avoid excessive use.
- Even though the iron has a fast heat-up feature, let it warm up for a couple of minutes for optimal styling.
- For thicker, coarser hair, use smaller sections for better results.

Specifications

Certifications: CE, RoHS
Model: WaveCurler 5-in-1
Importer: Aldrimett AS
Voltage, Frequency, and Power (EU): 110-240V, 50-60Hz, 45-100W

Made in China

© 2025 CURLI. Designed by CURLI in Oslo.