CURLI

CLEARSKIN™

User Manual

Norsk bruksanvisning 1

- Innhold i pakken 2
- Spesifikasjoner 2
- Viktige sikkerhetsinstrukser 3
- Elektrisk sikkerhet 3
- Reparasjon og modifikasjon 3
- Før du bruker ClearSkin™ 4
- Hvordan bruke ClearSkin™ 4
- Rengjøring og vedlikehold 7
- CURLI kundeservice og garanti 8

English User Manual 9

- Package Contents 10
- Specifications 10
- Important Safety Instructions 11
- Electrical Safety 11
- Repair and Modification 11
- Before Using ClearSkin™ 12
- How to Use ClearSkin™ 12
- Cleaning and Maintenance 15
- CURLI Support & Warranty 16

ClearSkin™

Norsk bruksanvisning

Innhold i pakken

1. CURLI ClearSkin™ dermaplaning apparat
2. 8 stk. ClearSkin™ utskiftbare blader
3. Ladekabel til apparatet

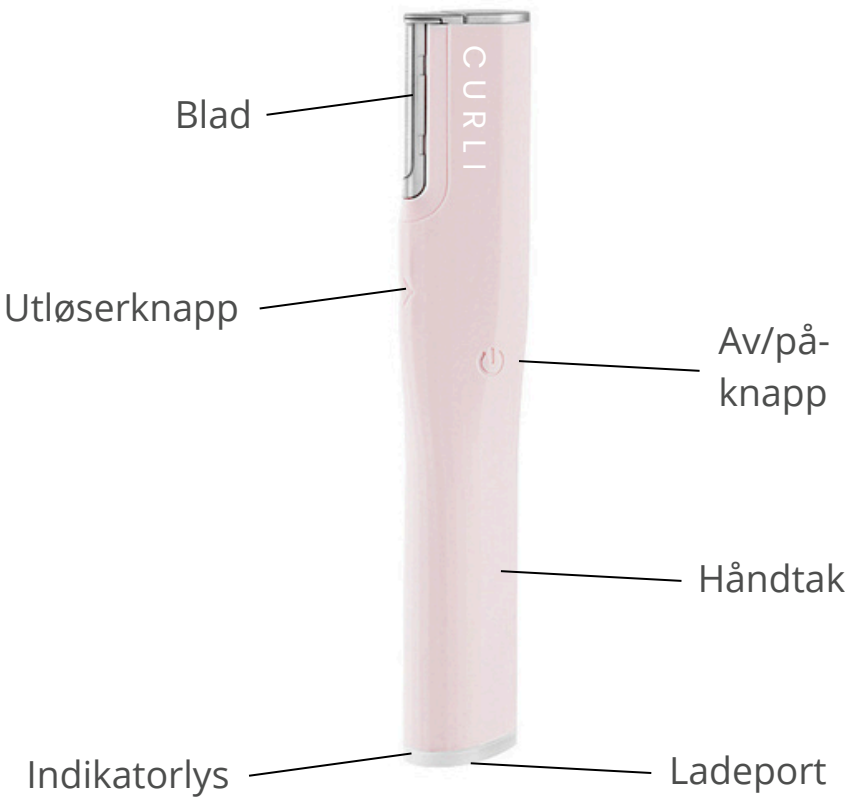

Spesifikasjoner

Produktnavn: ClearSkin™
Modell: CI-060
Lading: 5V ⎓ / 1A
Effekt: 0,3W
Brukstid per lading: opptil 4 timer
Ladetid: ca. 1,5 timer
Vekt (netto): 70 g
Materialer: ABS og silikon

Viktige sikkerhetsinstrukser

- ClearSkin™ er kun beregnet for bruk på ansiktets hud og skal ikke brukes på andre deler av kroppen.
- Produktet er kun ment for personlig bruk og skal ikke brukes kommersielt eller profesjonelt.
- Apparatet skal ikke brukes av personer under 18 år. Oppbevar produktet utilgjengelig for barn.
- Apparatet inneholder et skarpt, roterende blad. Unngå direkte kontakt med bladet og hold fingre, hår og løse gjenstander unna bladområdet under bruk.
- Slå alltid av apparatet før bytte, fjerning eller håndtering av blad.
- Bruk aldri apparatet dersom bladet er skadet, sløvt eller ikke sitter korrekt montert.
- Bruk kun originale ClearSkin™ blader som er beregnet for dette apparatet.
- Del aldri blader mellom flere personer, av hygieniske og sikkerhetsmessige årsaker.

Elektrisk sikkerhet

- Bruk kun ladekabel og strømkilde som er kompatibel med apparatet.
- Koble alltid fra laderen før rengjøring.
- Ikke bruk apparatet dersom ladekabelen er skadet.
- Apparatet er ikke vanntett og må ikke senkes i vann eller utsettes for fuktighet.
- Ikke utsett apparatet for ekstreme temperaturer, direkte sollys eller åpen ild.

Reparasjon og modifikasjon

- Ikke forsøk å demontere, modifisere eller reparere apparatet selv.
- Apparatet inneholder ingen deler som kan repareres av bruker.
- Bruk av uautoriserte deler eller endringer kan føre til skade og vil oppheve garanti og reklamasjonsrett.

Før du bruker ClearSkin™

- Før første gangs bruk anbefales det å lade apparatet helt opp. Koble ladekabelen til en vegglader med USB A uttak, og sett kabelen i ladeporten på apparatet.
- Under lading vil indikatorlyset på undersiden blinke rolig. Når batteriet er fulladet etter omtrent 1,5 time, lyser indikatorlampen jevnt. En full opplading gir opptil 4 timers brukstid.

Hvordan bruke ClearSkin™

Sette inn eller bytte blad

For å kunne bruke apparatet må et blad være korrekt montert. Dersom dette er første gang du bruker ClearSkin™, eller dersom bladet allerede er brukt, må et nytt blad settes inn.

Viktig: Bladene er skarpe. Håndter dem forsiktig for å unngå skader.

1. Hold apparatet stødig og trykk på utløserknappen på forsiden for å løsne det gamle bladet.
2. Vær oppmerksom på fjærmekanismen i apparatet. Bladet kan løsne raskt dersom det ikke holdes kontrollert.
3. Ta et nytt blad og skyv det forsiktig inn i apparatet.
4. Når bladet sitter riktig, vil du høre et klikk, og toppen av bladet skal flukte med metallkanten øverst på apparatet.
5. Når bladet er korrekt montert, er apparatet klart til bruk.

Forberedelse av huden

Før bruk skal huden være helt ren og tørr. Fjern sminke og eventuelle rester av hudpleieprodukter. Rens ansiktet med en mild ansiktsrens og massér forsiktig inn med sirkulære bevegelser. Skyll godt med lunkent vann, og tørk huden ved å klappe den forsiktig tørr med et rent håndkle.

Starte ClearSkin™

1. Slå på apparatet ved å trykke kort på av/på knappen på siden. Når apparatet er aktivt, vil indikatorlyset på undersiden lyse.
2. ClearSkin™ starter automatisk i nivå 1 med redusert intensitet. Trykk én gang til på samme knapp for å bytte til nivå 2 med full styrke.

Slik bruker du CURLI ClearSkin™

En full ansiktsbehandling tar vanligvis mellom 5 og 10 minutter. For best mulig hygiene og resultat anbefales det å bruke et nytt ClearSkin™ blad ved hver behandling.

Viktig: Apparatet skal aldri holdes rett mot huden. Unngå 90 graders vinkel, da dette kan føre til irritasjon eller skade.

- Før du starter behandlingen, bør håret holdes borte fra ansiktet. Fest det med hårstrikk eller klyper slik at huden er fri og lett tilgjengelig.
- ClearSkin™ er utviklet for å brukes i en naturlig vinkel på cirka 45 grader mot huden (se figur 1). Før apparatet forsiktig over huden i korte, lette bevegelser, slik vist i bruksillustrasjonene (se figur 2).
- Apparatet kan brukes på kinn, hake og området under haken, over og under leppene samt i pannen. Behandle ett område av gangen. Bruk den frie hånden til å holde huden stram mens du fører apparatet jevnt over hudoverflaten.
- Start gjerne ytterst ved hårfestet foran øret, og jobb deg gradvis innover langs ansiktets naturlige konturer.

Figur 1

Figur 2

Panneområdet

Vær ekstra oppmerksom rundt øyenbryn, hårfeste og eventuelle områder med hår du ønsker å bevare. Unngå å føre apparatet for tett på disse områdene. Bruk korte og lette bevegelser i nedadgående retning over huden rett over øyenbrynene. Apparater skal ikke brukes direkte på neseryggen.

Øye og kinnområde

CURLI ClearSkin™ skal ikke brukes i selve øyepartiet eller i nærheten av øyevipper og øyelokk. Start behandlingen foran øret, øverst på kinnbenet. Stram huden forsiktig med den frie hånden, og før apparatet innover mot nesen med korte, lette strøk langs kinnbenet og ansiktets naturlige linjer.

Området rundt leppene og hake

Apparatet skal ikke brukes direkte på leppene.

1. Over overleppen: Start ytterst ved nesens side og før apparatet nedover mot overleppen med korte bevegelser langs ansiktskonturen.
2. Under underleppen: Begynn ved munnvikene og jobb deg forsiktig innover mot midten med korte, oppadgående strøk.
3. Haken: Start midt på haken og før apparatet utover og nedover langs kjevelinjen med rolige, lette bevegelser.

Etter behandling med ClearSkin™

Når behandlingen er fullført, slår du av apparatet ved å trykke på av/på knappen. Indikatorlyset slukkes når apparatet er slått av. For sikker håndtering anbefales det å ta ut bladet etter bruk og oppbevare det i den medfølgende beholderen. Dette reduserer risikoen for skader og beskytter både apparatet og oppbevaringsposen.

Hudpleie etter bruk

Etter behandlingen anbefales det å påføre et serum eller en fuktighetskrem. Når døde hudceller er fjernet, kan hudpleieprodukter trekke bedre inn og gi økt effekt.
Merk: Huden kan være mer sensitiv etter dermaplaning. Unngå derfor andre eksfolierende produkter de neste 24 til 48 timene. Vent med ingredienser som retinol og produkter som inneholder syrer, som glykolsyre, melkesyre eller retinsyre, for å redusere risikoen for irritasjon.

Mild rødhet eller en lett prikkende følelse etter bruk er normalt og forsvinner som regel innen 24 timer. Dersom reaksjonen vedvarer eller forverres, anbefales det å kontakte kundeservice eller oppsøke helsepersonell.

Anbefalt behandlingsfrekvens

For best mulig resultat anbefales det å bruke ClearSkin™ én gang per uke. Dette gir huden tilstrekkelig tid til å hente seg inn mellom behandlingene. Hyppigere bruk kan føre til unødvendig belastning og irritasjon av huden.

Bytte av blad

For optimal hygiene og ytelse anbefales det å bruke et nytt ClearSkin™ blad ved hver behandling. Etter bruk kan det samle seg døde hudceller og fine hår i bladet, noe som både reduserer effektiviteten og øker risikoen for hudirritasjon.
Av hygieniske og sikkerhetsmessige hensyn skal samme blad aldri brukes av flere personer.

Rengjøring og vedlikehold

Rengjøring

- CURLI ClearSkin™ kan rengjøres ved å tørke av apparatet med en lett fuktet klut eller en våtserviett. Bladene er beregnet for engangsbruk og skal kastes etter bruk.
- Før rengjøring må apparatet være slått av og frakoblet lader. Apparatet er ikke vanntett og skal derfor ikke skylles eller senkes i vann. Unngå at fuktighet trenger inn i apparatet under rengjøring.

Batterivedlikehold

- Det oppladbare batteriet er integrert i apparatet og skal ikke tas ut eller byttes av bruker.

Avhending

- Produktet inneholder elektroniske komponenter som kan resirkuleres. For å ta hensyn til miljøet skal apparatet ikke kastes i vanlig husholdningsavfall. Lever det til et godkjent innsamlingssted for elektronisk avfall i henhold til lokale retningslinjer.

CURLI kundeservice og garanti

Hvis du opplever problemer med ditt CURLI-produkt, ber vi deg kontakte vår kundeservice direkte. Vi hjelper deg med feilsøking. Dersom en retur er nødvendig, vil vi sende deg en forhåndsbetalt returetikett uten kostnad. Denne garantien kommer i tillegg til dine lovfestede forbrukerrettigheter, som ikke påvirkes.

Merke: CURLI
Telefon: 22 25 22 55
E-post: kontakt@curli.no
Nettside: www.curli.no

Vårt kundeserviceteam vil sørge for at saken din håndteres raskt og profesjonelt.

Dette produktet er CE-merket og oppfyller gjeldende EU-krav til helse, sikkerhet og miljø i henhold til relevante direktiver.

Produktet er i samsvar med følgende EU-direktiver:
– 2014/35/EU (Lavspenningsdirektivet)
– 2014/30/EU (Direktivet for elektromagnetisk kompatibilitet – EMC)
– 2011/65/EU (RoHS-direktivet – begrensning av farlige stoffer)

Ikke bruk apparatet i nærheten av badekar, dusjer eller andre vannkilder. Produktet skal ikke kastes sammen med husholdningsavfall, men leveres til et godkjent gjenvinningsanlegg.

Les hele bruksanvisningen før bruk.

Produsent: Aldrimett AS, Rathkes gate 14 A, 0558 Oslo, Norge

En fullstendig samsvarserklæring er tilgjengelig på forespørsel.

ClearSkin™

English User Manual

Package Contents

1. CURLI ClearSkin™ Dermaplaning Device
2. 8 ClearSkin™ Replaceable Blades
3. Charging Cable

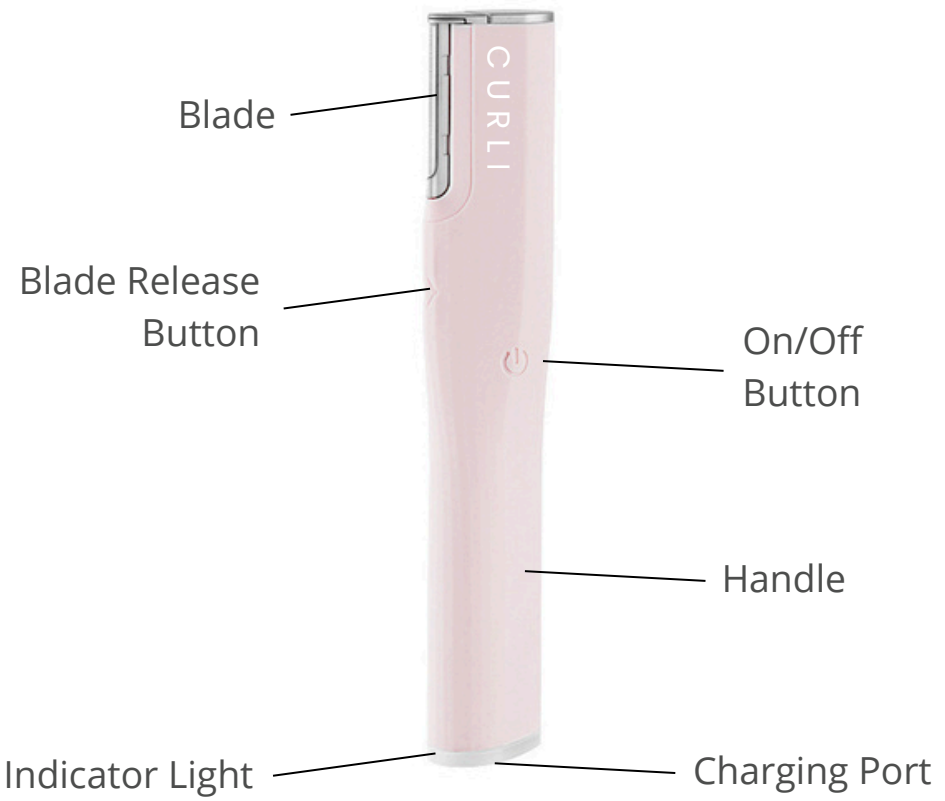

Specifications

Product Name: ClearSkin™
Model: CI-060
Charging Input: 5V ⎓ / 1A
Rated Power: 0.3 W
Operating Time Per Charge: Up to 4 Hours
Charging Time: Approx. 1.5 Hours
Net Weight: 70 g
Materials: ABS and Silicone

Important Safety Instructions

- ClearSkin™ is intended for use on facial skin only and must not be used on other parts of the body.
- This product is for personal use only and is not intended for commercial or professional use.
- The device must not be used by persons under 18 years of age. Keep the product out of reach of children.
- The device contains a sharp, rotating blade. Avoid direct contact with the blade and keep fingers, hair, and loose objects away from the blade area during use.
- Always switch off the device before inserting, removing, or handling the blade.
- Do not use the device if the blade is damaged, dull, or not properly installed.
- Use only original ClearSkin™ blades designed for this device.
- Never share blades between multiple users for hygiene and safety reasons.

Electrical Safety

- Use only the charging cable and power source compatible with the device.
- Always disconnect the charger before cleaning the device.
- Do not use the device if the charging cable is damaged.
- The device is not waterproof and must not be immersed in water or exposed to moisture.
- Do not expose the device to extreme temperatures, direct sunlight, or open flames.

Repair and Modification

- Do not attempt to disassemble, modify, or repair the device yourself.
- The device contains no user-serviceable parts.
- The use of unauthorized parts or modifications may cause injury and will void the warranty and any applicable consumer rights.

Before Using ClearSkin™

- Before first use, it is recommended to fully charge the device. Connect the charging cable to a wall adapter with a USB A port, then insert the cable into the charging port on the device.
- During charging, the indicator light on the underside of the device will pulse slowly. When the battery is fully charged after approximately 1.5 hours, the indicator light will remain steadily lit. A full charge provides up to 4 hours of use.

How to Use ClearSkin™

Inserting or Replacing the Blade

To operate the device, a blade must be properly installed. If this is your first time using ClearSkin™, or if the blade has already been used, a new blade must be inserted.

Important: The blades are sharp. Handle with care to avoid injury.

1. Hold the device securely and press the blade release button on the front of the device to remove the used blade.
2. Be aware of the spring mechanism inside the device. The blade may release quickly if not controlled properly.
3. Take a new blade and gently slide it into the device.
4. When the blade is correctly installed, you will hear a click, and the top of the blade should align flush with the metal edge at the top of the device.
5. Once the blade is properly installed, the device is ready for use.

Skin Preparation

Before use, ensure the skin is completely clean and dry. Remove all makeup and any remaining skincare products. Cleanse the face using a mild facial cleanser and gently massage it into the skin using circular motions. Rinse thoroughly with lukewarm water, then pat the skin dry with a clean towel.

Turning On ClearSkin™

1. Turn on the device by briefly pressing the On/Off button on the side. When the device is powered on, the indicator light on the underside will illuminate.
2. ClearSkin™ automatically starts in Level 1 with reduced intensity. Press the same button once more to switch to Level 2 with full intensity.

How to Use CURLI ClearSkin™

A full facial treatment typically takes between 5 and 10 minutes. For optimal hygiene and best results, it is recommended to use a new ClearSkin™ blade for each treatment.

Important: Never hold the device perpendicular to the skin. Avoid a 90-degree angle, as this may cause irritation or injury.

- Before starting the treatment, ensure that hair is pulled away from the face. Secure it with hair clips or a hair tie so the skin is clear and easily accessible.
- ClearSkin™ is designed to be used at a natural angle of approximately 45 degrees against the skin (see Figure 1). Gently glide the device over the skin using short, light strokes, as shown in the usage illustrations (see Figure 2).
- The device may be used on the cheeks, chin and under-chin area, above and below the lips, as well as the forehead. Treat one area at a time. Use your free hand to hold the skin taut while guiding the device smoothly across the skin surface.
- It is recommended to start near the hairline in front of the ear and work inward along the natural contours of the face.

Figure 1

Figure 2

Forehead Area

Use extra caution around the eyebrows, hairline, and any areas with hair you wish to preserve. Avoid moving the device too close to these areas. Use short, light downward strokes on the skin just above the eyebrows. The device should not be used directly on the bridge of the nose.

Eye and Cheek Area

CURLI ClearSkin™ must not be used in the eye area or near the eyelashes or eyelids. Begin treatment in front of the ear at the upper cheekbone. Gently hold the skin taut with your free hand and guide the device inward toward the nose using short, light strokes along the cheekbone and natural facial contours.

Lip and Chin Area

Do not use the device directly on the lips.

1. Above the Upper Lip: Start at the outer edge of the nose and move the device downward toward the upper lip using short strokes along the facial contour.
2. Below the Lower Lip: Begin at the corners of the mouth and move inward toward the center using short, upward strokes.
3. Chin: Start at the center of the chin and move outward and downward along the jawline using gentle, light strokes.

After Treatment With ClearSkin™

Once the treatment is complete, turn off the device by pressing the On/Off button. The indicator light will turn off when the device is powered down.

For safe handling, it is recommended to remove the blade after use and store it in the provided holder. This helps reduce the risk of injury and protects both the device and the storage pouch.

Skincare After Use

After treatment, apply a serum or moisturizer. The exfoliating effect allows skincare products to absorb more effectively.

Note: The skin may be more sensitive after dermaplaning. Avoid other exfoliating products for 24 to 48 hours. Delay the use of ingredients such as retinol and products containing acids, including glycolic acid, lactic acid, or retinoic acid, to reduce the risk of irritation.

Mild redness or a slight tingling sensation after use is normal and typically subsides within 24 hours. If the reaction persists or worsens, it is recommended to contact customer service or seek medical advice.

Recommended Treatment Frequency

For best results, it is recommended to use ClearSkin™ once per week. This allows the skin sufficient time to recover between treatments. More frequent use may lead to unnecessary skin stress and irritation.

Blade Replacement

For optimal hygiene and performance, it is recommended to use a new ClearSkin™ blade for each treatment. After use, dead skin cells and fine hairs can accumulate on the blade, reducing effectiveness and increasing the risk of skin irritation.

For hygiene and safety reasons, the same blade must never be shared between multiple users.

Cleaning and Maintenance

Cleaning

- CURLI ClearSkin™ may be cleaned by wiping the device with a soft, lightly damp cloth or a wet wipe. The blades are intended for single use and must be disposed of after use.
- Before cleaning, ensure the device is switched off and disconnected from the charger. The device is not waterproof and must not be rinsed or submerged in water. Avoid allowing moisture to enter the device during cleaning.

Battery Maintenance

- The rechargeable battery is built into the device and must not be removed or replaced by the user.

Disposal

- The product contains electronic components that can be recycled. To protect the environment, do not dispose of the device with household waste. Dispose of it at an approved collection point for electronic waste in accordance with local regulations.

CURLI Support & Warranty

If you experience any issues with your CURLI product, please contact our customer support directly. We will assist you with troubleshooting. If a return is necessary, we will provide a prepaid return label at no cost to you. This warranty is provided in addition to your statutory consumer rights, which are not affected.

Brand: CURLI
Phone: 22 25 22 55
Email: kontakt@curli.no
Website: www.curli.no

Our support team will ensure your issue is handled quickly and professionally.

This product is CE marked and complies with EU requirements for health, safety, and environmental protection under the applicable directives.

The product conforms to the following EU directives:
– 2014/35/EU (Low Voltage Directive)
– 2014/30/EU (Electromagnetic Compatibility Directive – EMC)
– 2011/65/EU (RoHS – Restriction of Hazardous Substances)

Do not use the appliance near bathtubs, showers, or other sources of water. Do not dispose of it with household waste – it must be delivered to an approved recycling facility.

Read the entire manual before use.

Manufacturer: Aldrimett AS, Rathkes gate 14 A, 0558 Oslo, Norway

A full Declaration of Conformity is available upon request.