CURLI

GENTLECARE™

User Manual

Norsk bruksanvisning 1
- Advarsel 2
- Beskrivelse av komponenter 2
- Spesifikasjoner 2
- Lademodus 2
- Slik bruker du apparatet 3
- Rengjøring og vedlikehold 3
- Forsiktighet 3
- Feilsøkingsguide 4
- Tips for en mer behagelig opplevelse 4
- CURLI kundeservice og garanti 5

English User Manual 6
- Warning 7
- Components Description 7
- Specifications 7
- Charging Mode 7
- How to Use 8
- Care and Maintenance 8
- Caution 8
- Troubleshooting Guide 9
- Tips for a More Comfortable Experience 9
- CURLI Support & Warranty 10

GentleCare™

Norsk bruksanvisning

Advarsel

- For å unngå skade og personskade, må apparatet ikke plasseres i nærheten av hår, øyenbryn, øyevipper, klær, tråder, børster eller løse gjenstander mens det er i bruk.
- De første gangene du bruker apparatet, kan huden bli lett rød eller irritert. Dette er normalt og vil forsvinne raskt. Ved fortsatt bruk vil huden tilpasse seg, irritasjonen reduseres, og hårene kan vokse ut igjen tynnere og mykere. Hvis en allergisk reaksjon ikke forsvinner innen 3 dager, bør du kontakte lege.

Beskrivelse av komponenter

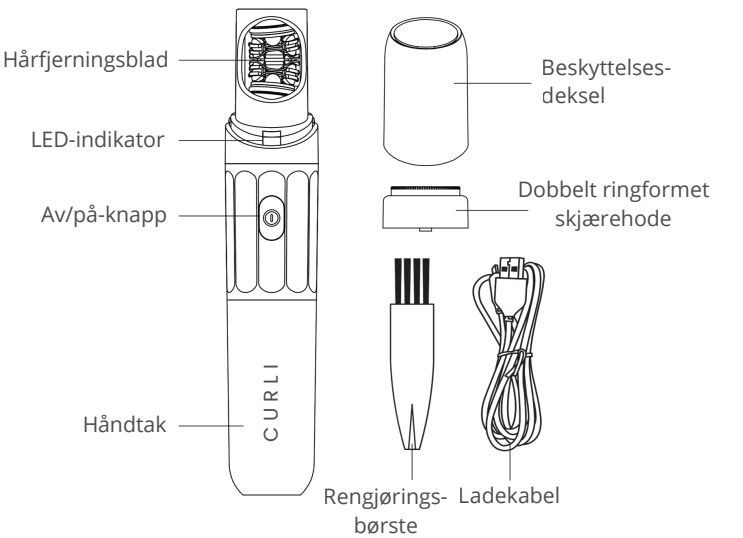

Spesifikasjoner

Produktnavn: GentleCare™
Modell: CI-059
Driftsspenning: 3,7V ⎓
Nominell effekt: 1,5W
Nettovekt: 66 g

Lademodus

Lad produktet helt opp før første gangs bruk.

1. Sett den lille enden av ladekabelen inn i ladeporten (b) på håndtaket (a). Koble den andre enden til en kompatibel strømadapter, powerbank eller datamaskin for sikker lading (se figur 1).
2. Under lading lyser den røde indikatorlampen (c) på håndtaket kontinuerlig. Full opplading tar cirka 2 timer.
3. Når produktet er fulladet, lyser indikatorlampen grønt. Produktet kan da brukes i omtrent 1 time.

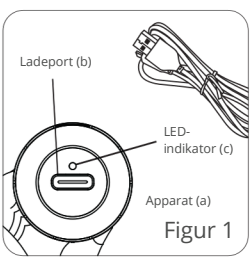

Figur 1

Slik bruker du apparatet

1. Fjern beskyttelsesdekselet (se figur 2).
2. Trykk på av/på-knappen for å slå på apparatet og aktivere epileringsmodus (se figur 3).
3. Hold apparatet vertikalt mot huden og før det sakte i hårets vekstretning. Kan brukes i ansiktet, på hender og ben (se figur 4).
4. Ved bruk av dobbelt ringformet skjærehode, trykk hodet forsiktig flatt mot huden. Apparatet må ikke vinkles. Før det i små, sirkulære bevegelser for å fjerne uønsket hår (se figur 5). Kan brukes i ansiktet og på resten av kroppen.

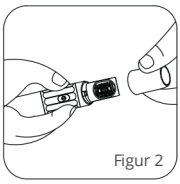
Figur 2

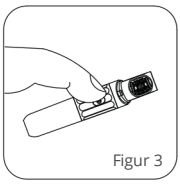
Figur 3

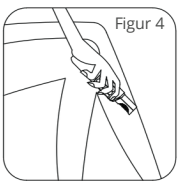
Figur 4

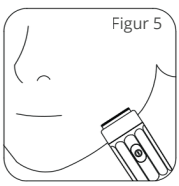
Figur 5

Montering av nytt blad

1. Vri bladet mot klokken og fjern det ved å trekke det forsiktig ut (se figur 6).
2. Monter det dobbelt ringformede skjærehodet ved å vri det med klokken til det sitter godt fast (se figur 7).

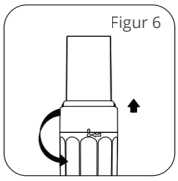
Figur 6

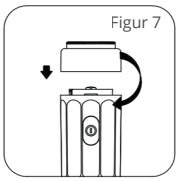
Figur 7

Rengjøring og vedlikehold

1. Etter hver bruk skal skjærehodet rengjøres med rengjøringsbørsten for å fjerne hårrester (se figur 8).
2. Det dobbelt ringformede skjærehodet og oppbevaringsrommet skal også rengjøres med rengjøringsbørsten (se figur 9).
3. Skyll bladene med rent eller lunkent vann med jevne mellomrom. Både hårfjerningsbladet og det dobbelt ringformede skjærehodet kan tas av og skylles.
4. Når bladene er helt tørre, monter dem tilbake på apparatet ved å vri med klokken, og sett deretter på beskyttelsesdekselet igjen.

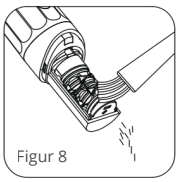
Figur 8

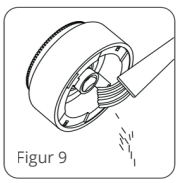
Figur 9

Forsiktighet

- Beskytt apparatet mot fuktighet og sørg for at vann ikke trenger inn i apparatet under rengjøring.
- Ikke plasser apparatet i oppvaskmaskin eller mikrobølgeovn.
- Slå av apparatet før rengjøring.
- Skjærehodet kan skylles med vann. Hoveddelen må ikke skylles og skal kun tørkes forsiktig av med en myk klut eller bomullspad fuktet med kaldt eller lunkent vann.
- Ikke bruk skarpe, etsende eller flyktige rengjøringsmidler.
- Ikke bruk apparatet på irritert hud. Hvis hudavskrapninger oppstår, skal bruken avbrytes.
- Oppbevar produktet utilgjengelig for barn.

Feilsøkingsguide

Hvis apparatet ikke fungerer som forventet
Sørg for at apparatet holdes i riktig vinkel og føres sakte over huden mot hårets vekstretning. For best resultat bør epileringshodet rengjøres etter hver bruk for å opprettholde optimal ytelse.

Hvis apparatet blir varmt og slutter å fungere
Den innebygde overopphetingsbeskyttelsen kan ha blitt aktivert. Slå av apparatet og la det kjøle seg helt ned. Vent i cirka én time før du slår det på igjen.

Hvis hudirritasjon oppstår etter bruk
Milde hudreaksjoner kan forekomme, spesielt ved de første gangs bruk. Ved senere behandlinger bør huden strekkes forsiktig og apparatet føres varsomt over hudoverflaten. Hvis irritasjonen vedvarer i mer enn 3 dager, skal bruken avbrytes og lege kontaktes.

Tips for en mer behagelig opplevelse

Epilering kan gi lett ubehag, spesielt de første gangene. Denne følelsen avtar vanligvis over tid etter hvert som huden tilpasser seg. Følgende råd kan bidra til å gjøre behandlingen mer behagelig:

Forbered huden på forhånd
Bruk av apparatet etter et varmt bad eller en dusj kan bidra til å åpne porene og redusere ubehag. Lett eksfoliering av huden på forhånd fjerner døde hudceller og gjør det lettere for apparatet å få tak i hårene, noe som kan redusere irritasjon.

Start forsiktig hvis du er ny til epilering
Hvis du bruker epilator for første gang, kan det være lurt å barbere området 2–3 dager før første behandling. Kortere hår kan gjøre den første opplevelsen mer behagelig. Trimmerhodet kan brukes til dette formålet.

Bruk riktig teknikk under behandlingen
Stram huden med den frie hånden mens apparatet føres sakte over huden. Å holde huden stram er en av de mest effektive måtene å redusere ubehag på. For best resultat bør apparatet brukes i et varmt rom, da gåsehud kan gjøre hårfjerningen mindre effektiv.

Ro ned huden etter bruk
Etter behandlingen kan Aloe vera eller en beroligende krem påføres for å roe ned huden og lindre eventuell irritasjon.

Bruk apparatet regelmessig
Regelmessig bruk bidrar til kortere hår, noe som gjør hver behandling raskere og mer behagelig over tid.

CURLI kundeservice og garanti

Hvis du opplever problemer med ditt CURLI-produkt, ber vi deg kontakte vår kundeservice direkte. Vi hjelper deg med feilsøking. Dersom en retur er nødvendig, vil vi sende deg en forhåndsbetalt returetikett uten kostnad. Denne garantien kommer i tillegg til dine lovfestede forbrukerrettigheter, som ikke påvirkes.

Merke: CURLI
Telefon: 22 25 22 55
E-post: kontakt@curli.no
Nettside: www.curli.no

Vårt kundeserviceteam vil sørge for at saken din håndteres raskt og profesjonelt.

Dette produktet er CE-merket og oppfyller gjeldende EU-krav til helse, sikkerhet og miljø i henhold til relevante direktiver.

Produktet er i samsvar med følgende EU-direktiver:
– 2014/35/EU (Lavspenningsdirektivet)
– 2014/30/EU (Direktivet for elektromagnetisk kompatibilitet – EMC)
– 2011/65/EU (RoHS-direktivet – begrensning av farlige stoffer)

Ikke bruk apparatet i nærheten av badekar, dusjer eller andre vannkilder. Produktet skal ikke kastes sammen med husholdningsavfall, men leveres til et godkjent gjenvinningsanlegg.

Les hele bruksanvisningen før bruk.

Produsent: Aldrimett AS, Rathkes gate 14 A, 0558 Oslo, Norge

En fullstendig samsvarserklæring er tilgjengelig på forespørsel.

GentleCare™

English User Manual

Warning

- To avoid damage and injury, do not place the device near hair, eyebrows, eyelashes, clothing, threads, brushes, or other loose objects while it is operating.
- During the first few uses, your skin may become slightly red or irritated. This is normal and will disappear quickly. With continued use, your skin will adapt, irritation will be reduced, and hair may grow back thinner and softer. If any allergic reaction does not disappear within 3 days, consult a doctor.

Components Description

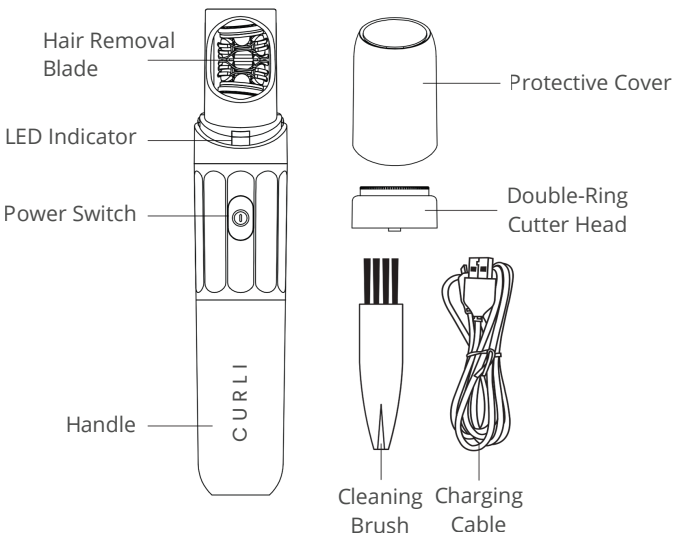

Specifications

Product Name: GentleCare™
Model: CI-059
Working Voltage: 3.7V ⎓
Rated Power: 1.5W
Net Weight: 66 g

Charging Mode

Please fully charge the product before using it for the first time. Figure 5

1. Insert the small end of the charging cable into the charging port (b) at the bottom of the product (a). Plug the other end into a compatible power adapter, power bank, or computer for charging (see Figure 1).
2. During charging, the red indicator light (c) at the bottom of the product remains on. Full charging takes approximately 2 hours.
3. When the product is fully charged, the indicator light turns green. The product can then be used for approximately 1 hour.

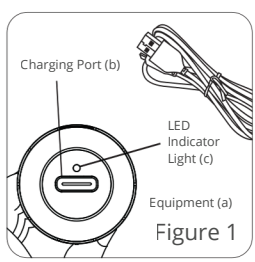

Figure 1

How to Use

1. Remove the protective cover (see Figure 2).
2. Touch the power switch to turn on the device and activate the plucking mode (see Figure 3).
3. Hold the device vertically against the skin and move it slowly in the direction of hair growth. Suitable for use on the face, hands, and legs (see Figure 4).
4. When using the double-ring cutter head, gently press the head flat against the skin. Do not tilt the device. Move it in small circular motions to remove unwanted hair (see Figure 5). Suitable for use on the face and body.

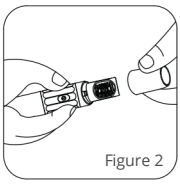
Figure 2

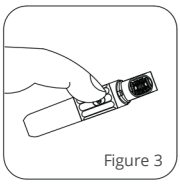
Figure 3

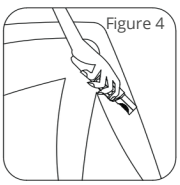
Figure 4

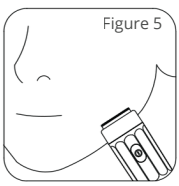
Figure 5

Installing Replacement Blade

1. Rotate the blade counterclockwise and remove it by gently pulling it out (see Figure 6).
2. Install the double-ring cutter head by rotating it clockwise until it is securely tightened (see Figure 7).

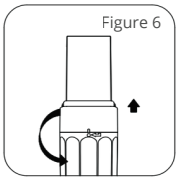
Figure 6

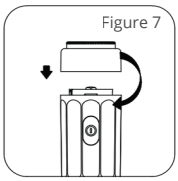
Figure 7

Care and Maintenance

1. After each use, clean the cutter head with the cleaning brush to remove any hair residue (see Figure 8).
2. The double-ring cutter head and the storage compartment should also be cleaned using the cleaning brush (see Figure 9).
3. Rinse the blades with clean or warm water periodically. Both the hair removal blade and the double-ring cutter head can be removed and rinsed.
4. After the blades are completely dry, reinstall them onto the device by rotating clockwise, and then place the protective cover back on.

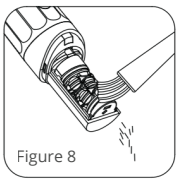
Figure 8

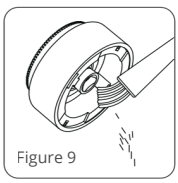
Figure 9

Caution

- Protect the appliance from moisture and prevent water from entering the device during cleaning.
- Do not place the appliance in a dishwasher or microwave oven.
- Turn off the device before cleaning.
- The cutter head may be rinsed with water. The main body must not be rinsed and should only be wiped gently with a soft cloth or cotton pad moistened with cold or warm water.
- Do not use sharp, corrosive, or volatile cleaning agents.
- Do not use the device on irritated skin. If skin abrasions occur, discontinue use.
- Keep the product out of reach of children.

Troubleshooting Guide

If the device does not perform as expected
Ensure the device is held at the correct angle and moved slowly across the skin against the direction of hair growth. For best results, clean the epilator head after each use to maintain optimal performance.

If the device becomes warm and stops operating
The built-in overheat protection may have been activated. Switch the device off and allow it to cool down completely. Wait approximately one hour before turning it on again.

If skin irritation occurs after use
Mild skin reactions may occur, especially during initial use. For future sessions, gently stretch the skin and move the device carefully over the skin surface. If irritation persists for more than 3 days, discontinue use and consult a doctor.

Tips for a More Comfortable Experience

Epilation may cause mild discomfort, especially during the first uses. This sensation usually decreases over time as the skin adapts. The following recommendations can help make the process more comfortable:

Prepare the skin in advance
Using the device after a warm shower or bath can help open the pores and reduce discomfort. Gently exfoliating the skin beforehand removes dead skin cells and allows the device to grip hair more easily, helping to reduce irritation.

Start gently if you are new to epilation
If you are using an epilator for the first time, consider shaving the area 2–3 days before your first session. Shorter hair can make the initial experience more comfortable. The trimmer head may be used for this purpose.

Use proper technique during treatment
Stretch the skin with your free hand while moving the device slowly over the skin. Keeping the skin taut is one of the most effective ways to reduce discomfort. For best results, use the device in a warm environment, as goosebumps can make hair removal less effective.

Soothe the skin after use
After treatment, apply Aloe vera or a soothing cream to calm the skin and relieve any temporary irritation.

Maintain regular use
Using the device regularly helps keep hair shorter, making each session quicker and more comfortable over time.

CURLI Support & Warranty

If you experience any issues with your CURLI product, please contact our customer support directly. We will assist you with troubleshooting. If a return is necessary, we will provide a prepaid return label at no cost to you. This warranty is provided in addition to your statutory consumer rights, which are not affected.

Brand: CURLI
Phone: 22 25 22 55
Email: kontakt@curli.no
Website: www.curli.no

Our support team will ensure your issue is handled quickly and professionally.

This product is CE marked and complies with EU requirements for health, safety, and environmental protection under the applicable directives.

The product conforms to the following EU directives:
– 2014/35/EU (Low Voltage Directive)
– 2014/30/EU (Electromagnetic Compatibility Directive – EMC)
– 2011/65/EU (RoHS – Restriction of Hazardous Substances)

Do not use the appliance near bathtubs, showers, or other sources of water. Do not dispose of it with household waste – it must be delivered to an approved recycling facility.

Read the entire manual before use.

Manufacturer: Aldrimett AS, Rathkes gate 14 A, 0558 Oslo, Norway

A full Declaration of Conformity is available upon request.